



WÄHLEN SIE HIER DEN ZU IHREM RADIO PASSENEN ADAPTER AUS


40331 Alpine

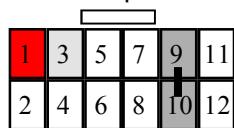


40331 Blaupunkt

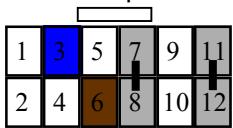


40331 Clarion

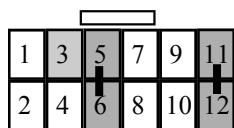


40334 JVC

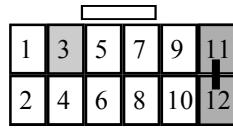


40335 Kenwood
Single wire

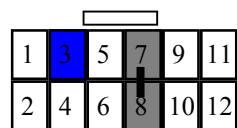


40336 Kenwood
4 pin DIN Plug

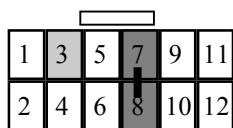


40337 Panasonic
Standard CD units

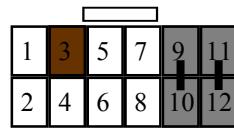


40338 Panasonic
AV head-units

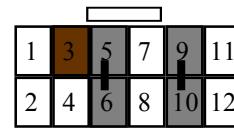


40342 Siemens
VDO

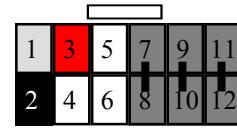


40341 Sony
3v & 5v units

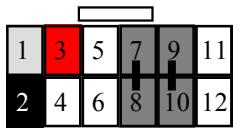

40343 Zenec

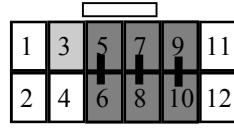


40346 Pioneer &
Sony

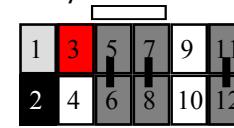


Special external drive
PCB version

CHOOSE THE CORRECT HEAD-UNIT ADAPTER FROM THOSE BELOW


40331 Alpine

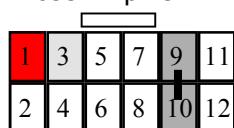


40331 Blaupunkt

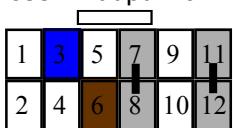


40331 Clarion

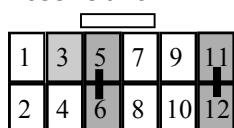


40334 JVC

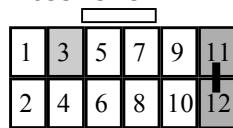


40335 Kenwood
Single wire

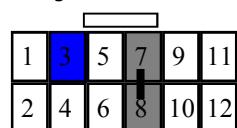


40336 Kenwood
4 pin DIN Plug

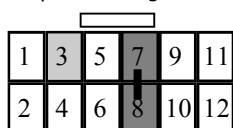


40337 Panasonic
Standard CD units

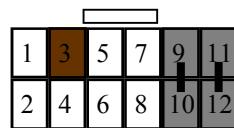


40338 Panasonic
AV head-units

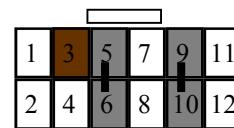


40342 Siemens
VDO

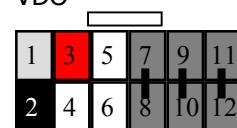


40341 Sony
3v & 5v units

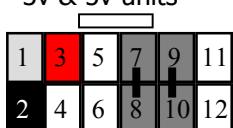

40343 Zenec

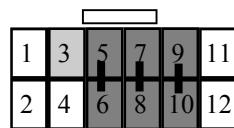

40346 Pioneer &
Sony

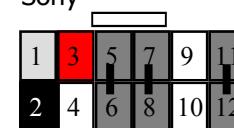

Special external drive
PCB version