

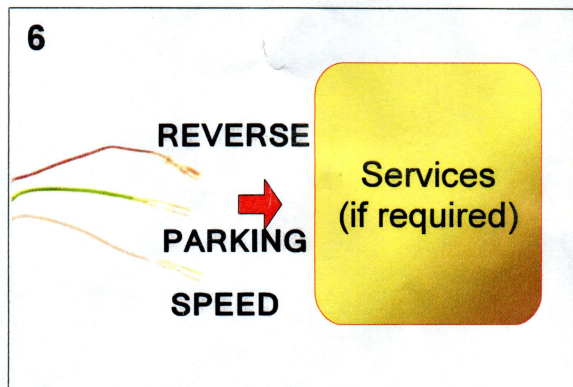
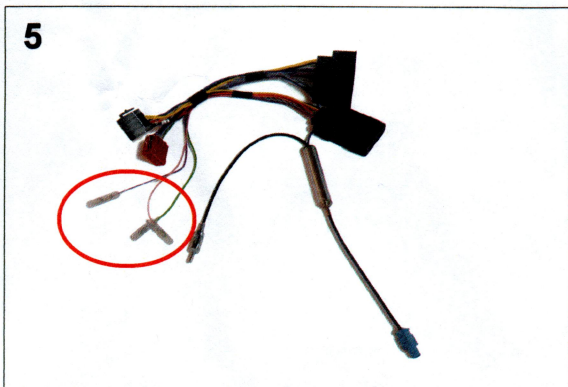
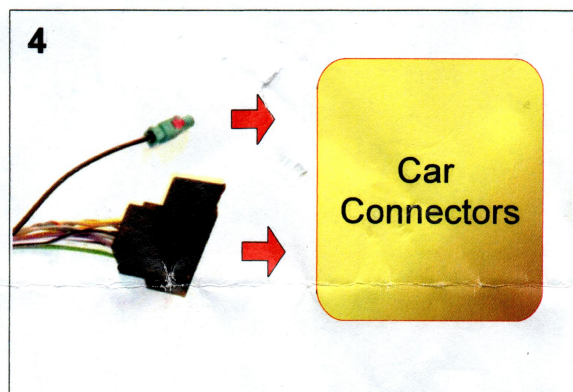
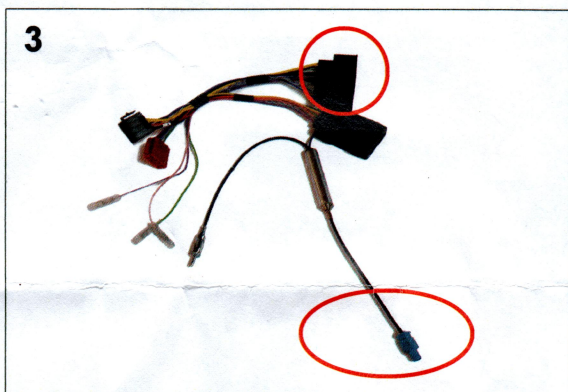


Alfa Giulietta – 2014-> -- SWC Interface

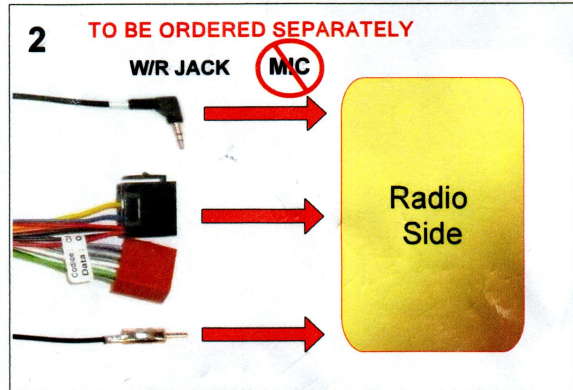

In order to prevent ESD damage, the W/R Jack must be connected before plugging the connectors on car side

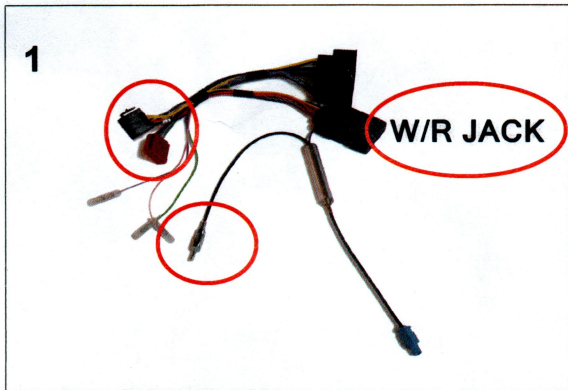

Installation must be performed by a qualified professional installer only. The manufacturer is not liable for any kind of incidental or indirect damages.
09/2015 - All rights reserved. No liability for misprints.

Alfa Romeo Giulietta 2015 settings



How to access the setting menus:

In order to access the different setting menus, please perform all the following actions:

- switch on the dashboard
- pull the handbrake
- push the brake pedal
- leave the driver's door open

Setting Controls

All the settings can be made using the steering wheel commands.

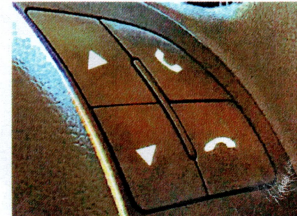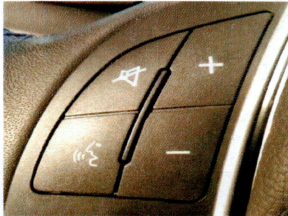

Clock settings

Time/date can be set by entering year, month, day, hours, minutes in the mentioned sequence.

Please note that the year information is displayed in both hour/minutes fields.



- To access the clock setting, shortly press the MUTE button
- Use the Seek+ and Seek- buttons to set the year
- Press the MUTE button
- Use the Seek+ and Seek- buttons to set the month
- Press the MUTE button



- Use the Seek+ and Seek- buttons to set the day
- Press the MUTE button
- Use the Seek+ and Seek- buttons to set the hour
- Press the MUTE button
- Use the Seek+ and Seek- buttons to set the minutes
- Press the MUTE button or release the brake pedal / close the driver's door


Language settings

The system language can be set by choosing one of the following options:

- German
- English
- Spanish
- French
- Italian
- Dutch

- Polish
- Portuguese
- Turkish

In order to set the language, please perform the actions described above about “How to access the setting menus”,


then press the Vol+  button to scroll and choose the preferred language.

Release the brake pedal / close the driver's door.

Distance measuring-system settings

The system distance measuring-system can be set by choosing between km/h and mph.

In order to set the distance measuring-system, please perform the actions described above about “How to access


the setting menus”, then press the Vol-  button to scroll and choose the preferred measurement system.

Release the brake pedal / close the driver's door.

Temperature measuring-system settings

The system temperature measuring-system can be set by choosing between °C and F.

In order to set the temperature measuring-system, please perform the actions described above about “How to access

the setting menus”, then press the “Tel Hangup”  button to scroll and choose the preferred measurement system.

Release the brake pedal / close the driver's door.

Note: others accessories settings such as: rear view camera, doors lock, headlights sensor, rain sensor and so on must be set before removing the O.E.M. head unit.