

Steering wheel control interface installation kit for:


FIAT

Model: Ducato

Year: 2015>

Kit content: SWC CANBUS interface
wiring harness
radio adapter
antenna adapter(*) if included


Customer code:

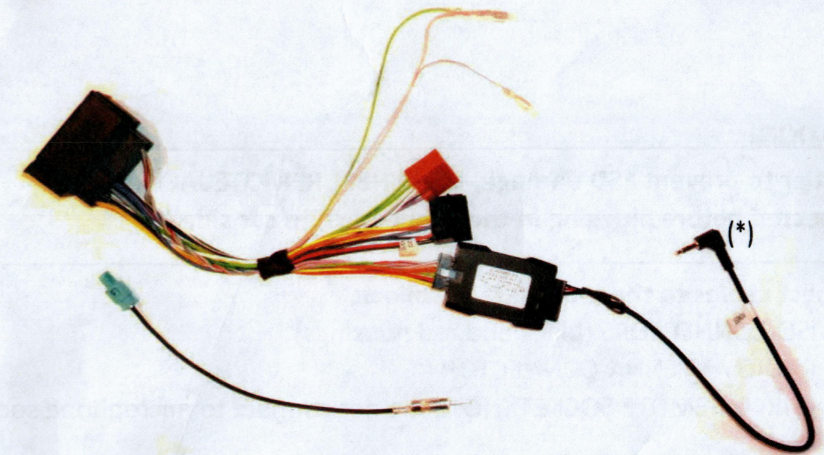

INSTALLATION MANUAL

All installation work must be performed by a qualified professional installer only.
The manufacturer / dealer is not liable for any kind of incidental or indirect damages.
09/2015 ALL RIGHTS RESERVED. Technical changes possible. No liability for misprints.

All installation work must be performed by a qualified professional installer only.
The manufacturer / dealer is not liable for any kind of incidental or indirect damages.
09/2015 ALL RIGHTS RESERVED. Technical changes possible. No liability for misprints.

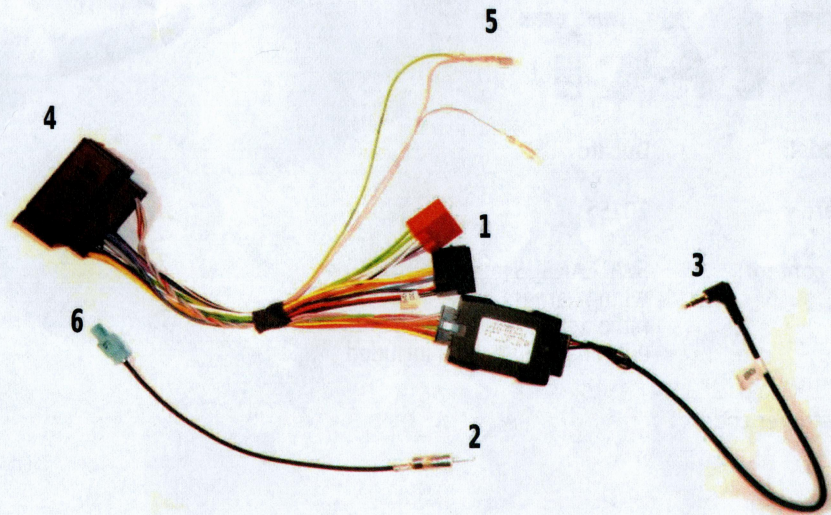

ATTENTION!

In order to prevent ESD damage, the WHEEL REMOTE JACK must be connected before plugging in the connectors on car side.

Connect cables to the radio side as follow:

- 1- to ISO CONNECTORS (black and red housings)
- 2- to RADIO ANTENNA-CONNECTOR
- 3- to WIRED REMOTE SOCKET (NOTE: do not connect to microphone socket)

Connect cables to the car side as follow:

- 4- to CAR CONNECTOR
- 5- to SERVICES (if required); functions are marked on the wires:
 - Green - Parking
 - Violet/White - Reverse
 - Pink - Speed
- 6- to CAR ANTENNA-CONNECTOR

The steering wheel buttons perform the following functions (if supported by the radio):

- 1- Volume +
- 2- Volume -
- 3- Accept incoming call
- 4- Reject incoming call
- 5- Mute
- 6- Voice
- 7- Seek up
- 8- Seek down

cut along the dotted line - copy for the vehicle owner

Fiat Ducato settings

How to access the setting menus:

 
In order to access the different setting menus, please perform all the following actions:

- switch on the dashboard
- pull the handbrake
- push the brake pedal
- leave the driver's door open

Setting Controls



All the settings can be made using the steering wheel commands.



Clock settings

Time/date can be set by entering year, month, day, hours, minutes in the mentioned sequence.

Please note that the year information is displayed in both hour/minutes fields.



- To access the clock setting, shortly press the MUTE button
- Use the Seek+ and Seek- buttons to set the year
- Press the MUTE button
- Use the Seek+ and Seek- buttons to set the month



- Press the MUTE button
- Use the Seek+ and Seek- buttons to set the day
- Press the MUTE button
- Use the Seek+ and Seek- buttons to set the hour
- Press the MUTE button
- Use the Seek+ and Seek- buttons to set the minutes
- Press the MUTE button or release the brake pedal / close the driver's door

Language settings

The system language can be set by choosing one of the following options:

- German
- English
- Spanish
- French
- Italian
- Dutch

- Polish
- Portuguese
- Turkish

In order to set the language, please perform the actions described above about “How to access the setting menus”,




then press the Vol+ button to scroll and choose the preferred language.

Release the brake pedal / close the driver's door.

Distance measuring-system settings

The system distance measuring-system can be set by choosing between km/h and mph.

In order to set the distance measuring-system, please perform the actions described above about “How to access

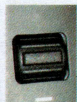
the setting menus”, then press the Vol-  button to scroll and choose the preferred measurement system.

Release the brake pedal / close the driver's door.

Temperature measuring-system settings

The system temperature measuring-system can be set by choosing between °C and F.

In order to set the temperature measuring-system, please perform the actions described above about “How to access

the setting menus”, then press the “Tel Hangup”  button to scroll and choose the preferred measurement system.

Release the brake pedal / close the driver's door.