



Connection points
radio frame / Dashboard




Remove the original panel starting at position shown



Unclip the trim frame surrounding the OEM head unit and remove it



Use a screwdriver to remove screws from the original car-radio

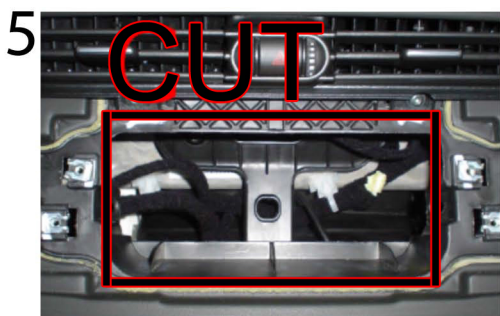


Cut the plastic frame and remove it



This is the result after cutting the plastic frame



Insert the snap fastener to the radio frame supplied with the kit

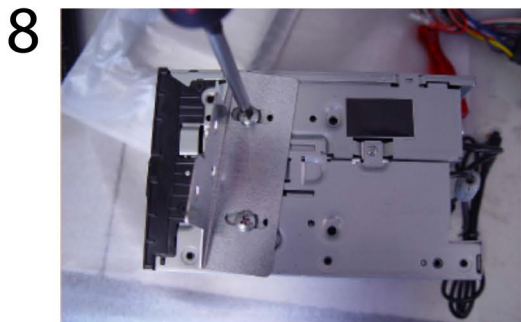

Screw the brackets to the head unit



Connect all the cables then mount the radio and screw it into place



Clip the fascia into place. Installation is now complete