


Installation manual for:
Hyundai I30 2007 -->

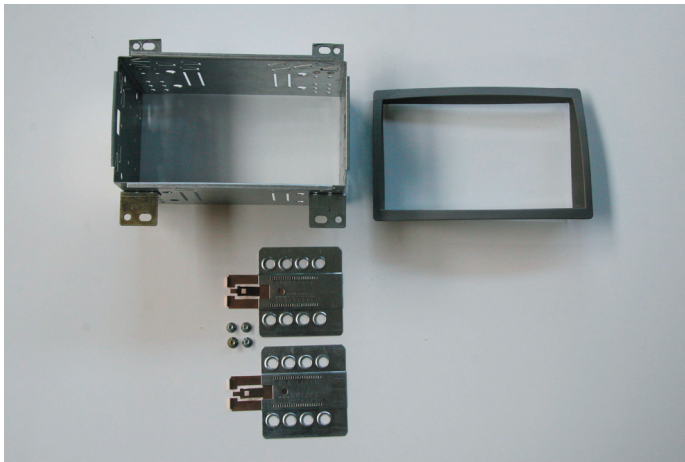

Installation kit includes the following items:

- * 1X 2-ISO 100 mm. metal bracket
- * 1X Radio trim
- * 2X Mounting plates
- * 2X Mounting spacers
- * 4X Screws
- * 2X Radio keys

NOTE:

The assembling time of the kit will take approximately 1 - 2 hours.

ALPINE
Mobile Media Solutions

clarion

KENWOOD
Listen to the Future

Pioneer *sound.vision.soul*

Pioneer
sound.vision.soul

CT23HY03A




Remove the screws in the storage bin above the dashboard.
At the location of the arrows.



Remove the dashboard panel around the OEM radio.
Use a plastic wedge.



Remove the original radio.
This is tighten by four screws.

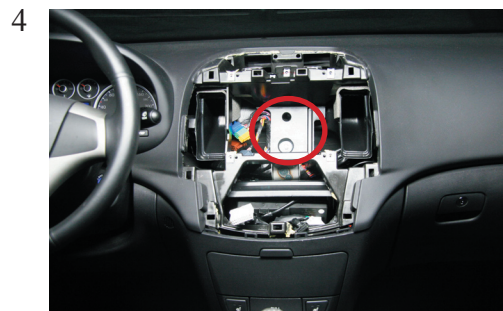

Cut off the end of the plastic frame and the metal plate that is circled(see photo).



Cut out the dimensions of the new headunit out of the OEM panel.


See cutting instructions last page.



Connect all of the needed wiring harnesses and check the connections carefully.

CT23HY03A

7

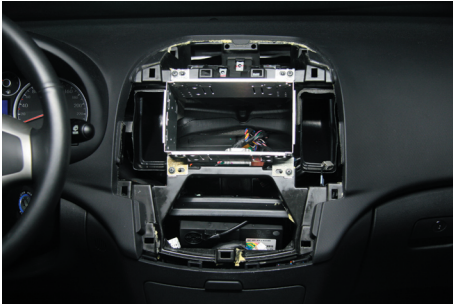

Place the metal bracket.

8



Place the new headunit.

9





Place the modified panel back,



Place the back the storage bin and place the new radio trim.



Connect all of the needed wiring harnesses and check the connections carefully.

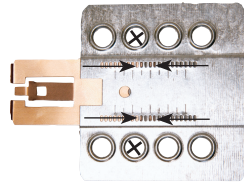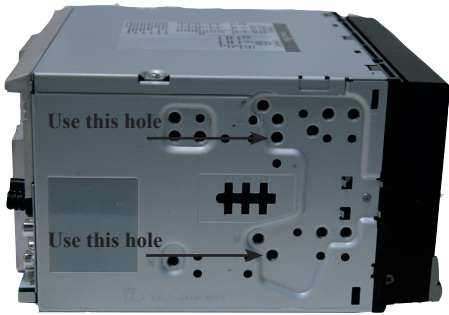

Alpine IVA-W205R

We advice to use the following positions.
Other positions are also possible.

Use position 2 marked with a cross.
Use position 14 & 16 marked with an arrow.
Measured from left to right.

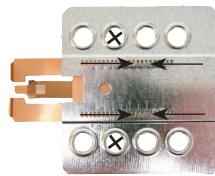
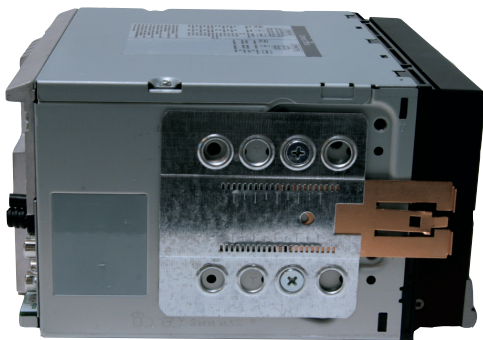


Alpine IVA-W200Ri

We advice to use the following positions.
Other positions are also possible.

Use position 2 marked with a cross.
Use position 14 & 16 marked with an arrow.
Measured from left to right.



clarion

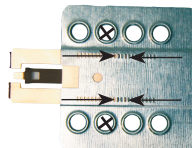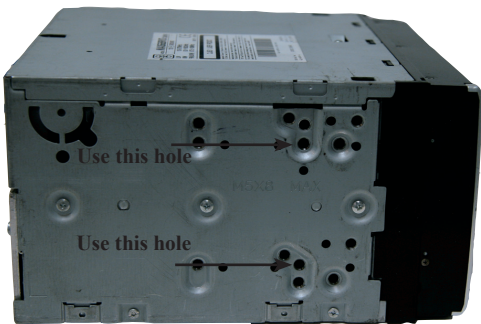

Clarion MAX668RVD

We advice to use the following positions.
Other positions are also possible.

Use position 2 marked with a cross.
Use position 16 & 18 marked with an arrow.
Measured from left to right.

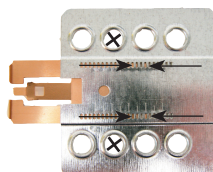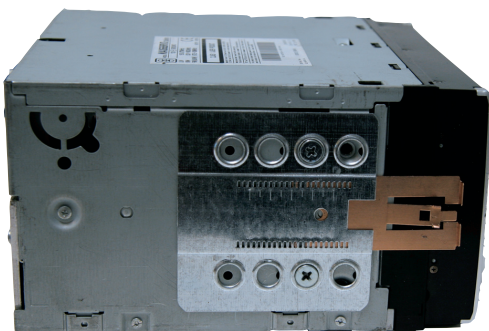



Clarion WXZ468RMP

We advice to use the following positions.
Other positions are also possible.

Use position 2 marked with a cross.
Use position 14 & 16 marked with an arrow.
Measured from left to right.

KENWOOD



Listen to the Future

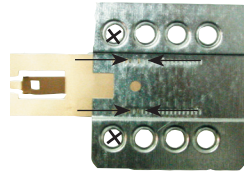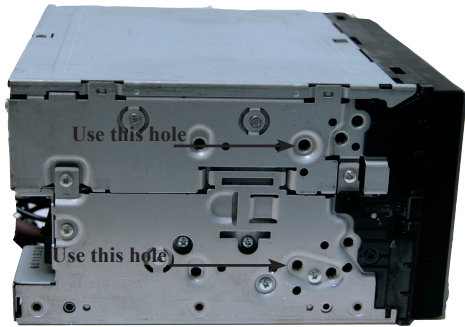

Kenwood DDX6029

We advice to use the following positions.
Other positions are also possible.

Use position 1 marked with a cross.
Use position 10 & 12 marked with an arrow.
Measured from left to right.

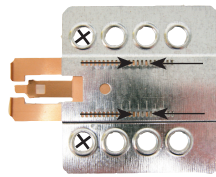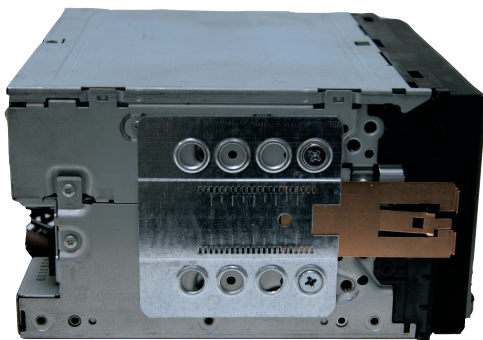



Kenwood DDX 7025

We advice to use the following positions.
Other positions are also possible.

Use position 1 marked with a cross.
Use position 14 & 16 marked with an arrow.
Measured from left to right.

Pioneer sound.vision.soul



Pioneer
sound.vision.soul

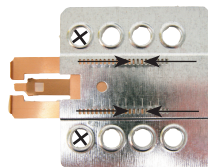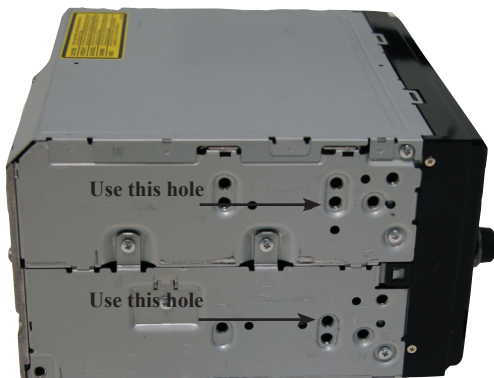

Pioneer HD1BT

We advice to use the following positions.
Other positions are also possible.

Use position 1 marked with a cross.
Use position 14 & 16 marked with an arrow.
Measured from left to right.

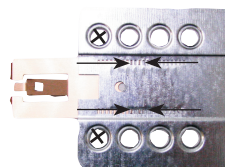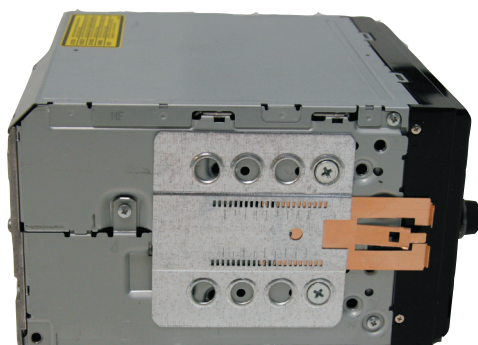

Pioneer Avic D3


We advice to use the following positions.
Other positions are also possible.

Use position 1 marked with a cross.
Use position 12 & 14 marked with an arrow.
Measured from left to right.

Please read all the instructions very carefully.



Carefully cut the dimension that are listed below.

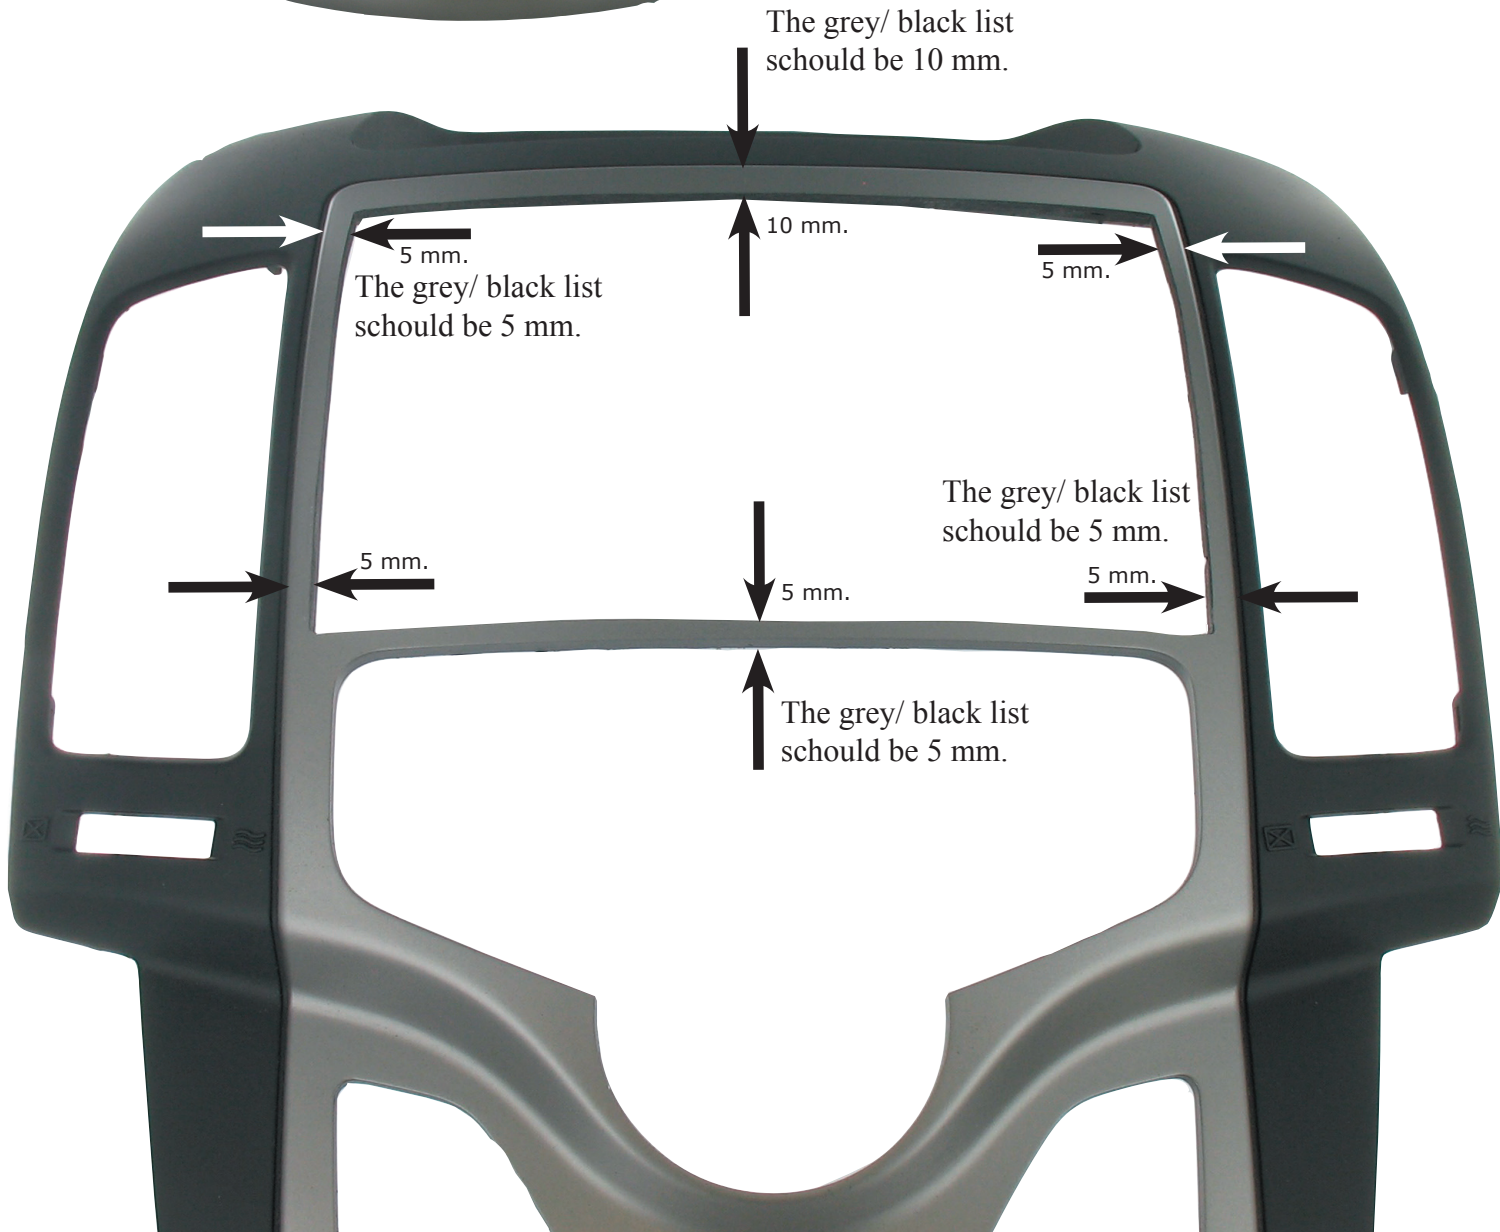

Please read all the instructions very carefully.