




CONFIGURATION MODE - long press (1 Sec.) Voice (9):

- 1- Volume up = up
- 2- Volume down = down
- 5- Seek up = left
- 6- Seek down = right
- 7- Mute = ok

*For your own safety, this feature is only enabled when the vehicle is not moving.
The settings can be modified if the related optional is equipped by the car.*

Example

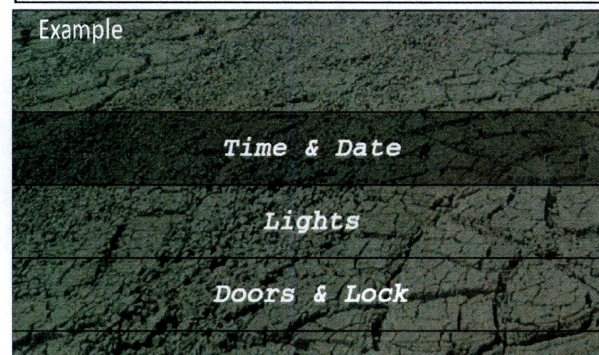

All installation work must be performed by a qualified professional installer only.
The manufacturer / dealer is not liable for any kind of incidental or indirect damages.
03/2016 ALL RIGHTS RESERVED. Technical changes possible. No liability for misprints. R0

Steering wheel control interface installation kit for:


JEEP

Model: Renegade

Year: 2015>


Kit content: SWC CANBUS VIDEO interface
wiring harness
antenna adapter
radio adapter (*) if included

Customer code:

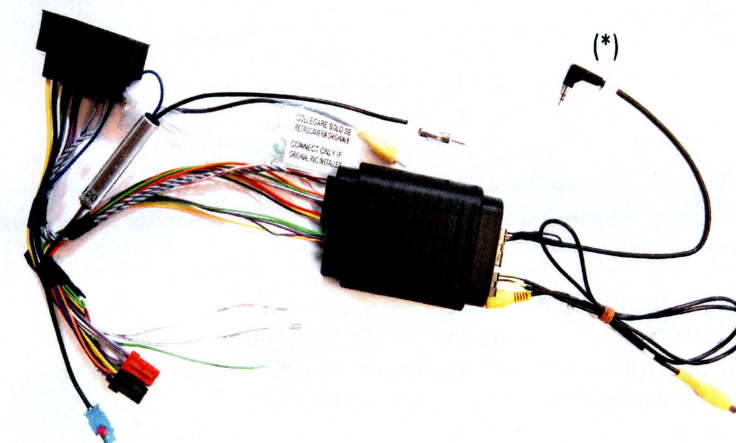

INSTALLATION MANUAL

All installation work must be performed by a qualified professional installer only.
The manufacturer / dealer is not liable for any kind of incidental or indirect damages.
03/2016 ALL RIGHTS RESERVED. Technical changes possible. No liability for misprints.
The image is only meant to represent the product.

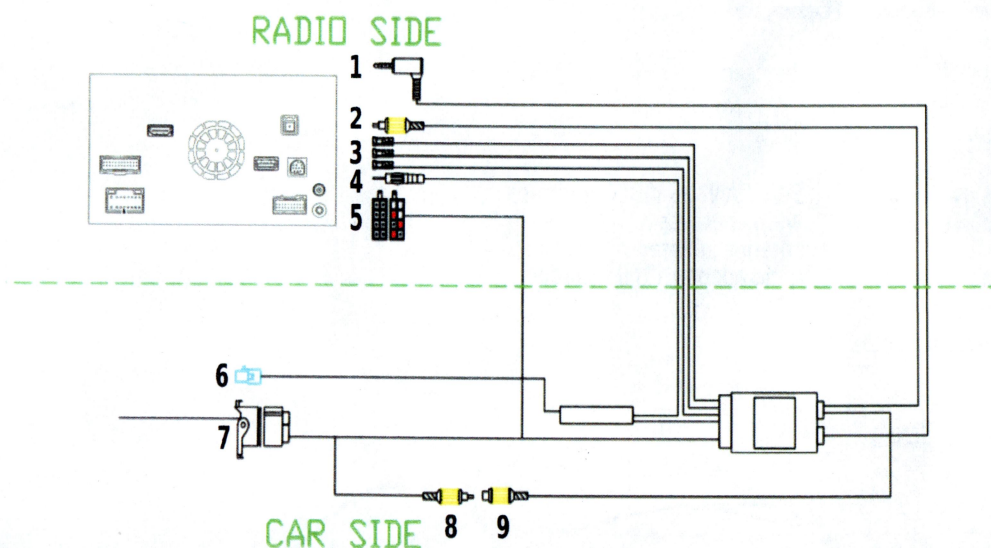

ATTENTION!


In order to prevent ESD damage, the WHEEL REMOTE JACK must be connected before plugging in the connectors on car side.

Connect cables to the radio side as follow:

- 1- to WIRED REMOTE SOCKET (NOTE: do not connect to microphone socket)
- 2- to REVERSE CAM INPUT (NOTE: always connect also if camera is not installed)
- 3- to SERVICES (if required); function is marked on the wire:
 - Green - Parking
 - Pink - Speed
 - Violet/White - Reverse (NOTE: always connect also if camera is not installed)
- 4- to RADIO ANTENNA-CONNECTOR
- 5- to ISO CONNECTOR (black and red housings)

Connect cables to the car side as follow:

- 6- to CAR ANTENNA-CONNECTOR
- 7- to CAR CONNECTORS
- 8- connect to number "9" only if original Rear View Camera installed (NOTE: only NTSC Camera, in control unit settings REVERSE CAMERA must be set)
- 9- to REVERSE CAM (NOTE: only NTSC Camera, in control unit settings REVERSE CAMERA must be set)

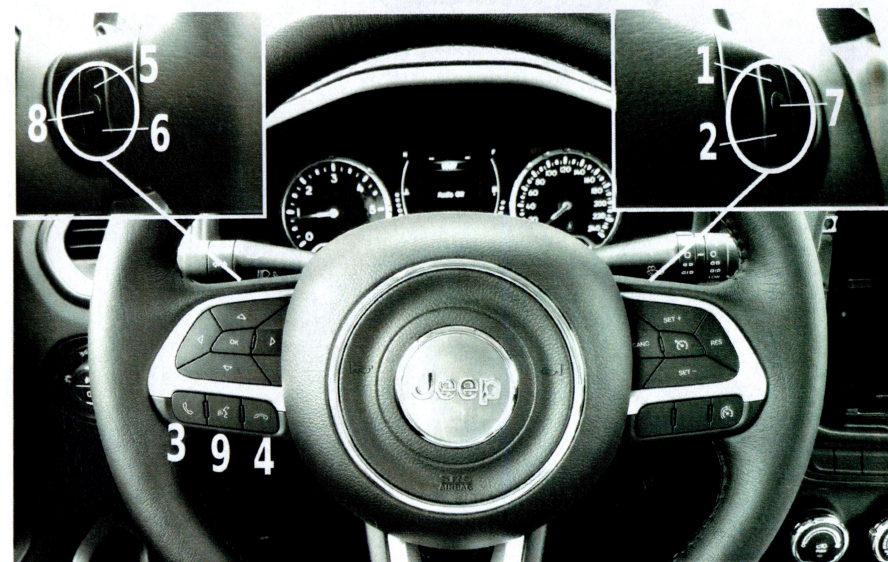

steering wheel buttons perform the following functions (if supported by the radio):

- | | |
|-------------------------|--------------|
| 1- Volume up | 6- Seek down |
| 2- Volume down | 7- Mute |
| 3- Accept incoming call | 8- Source |
| 4- Reject incoming call | 9- Voice |
| 5- Seek up | |

The available settings are (if the related optional is equipped by the car):

- | | |
|----------------------------|-----------------------------------|
| -Time setting | -Forward collision sensitivity |
| -Date setting | -Rear parking sensors |
| -Interior lights | -Front parking sensors |
| -Follow me system | -Lane assist |
| -Courtesy lights | -Lane assist strenght |
| -Cornering lights | -Blind spot warning |
| -Closing lights | -Side sense |
| -Autoclose | -Distance units of measure |
| -Passive entry | -Temperature units of measure |
| -Handbrake | -Pressure units of measure |
| -Language setting | -Aftermarket NTSC rearview camera |
| -Frontal collision warning | -OEM rearview camera |

cut along the dotted line - copy for the vehicle owner